

## Artikeliste for DCR020 SITE RADIO 1

Detalj	Artikelnummer	Antal	Artikelbeskrivelse	Almen beskrivelse	Øvrig information	Reperationsinstruktion	Markeder
1	1004694-44	1	KNOB			No	
2	1004694-45	1	COVER SA	FRONT		No	
3	1004696-61	1	BUTTON SA			No	
4	1004694-47	1	SPEAKER			No	
5	1004696-62	1	PCB SA	DISPLAY		No	
6	1004696-63	1	PCB SA	KEYPAD		No	
7	1004694-50	1	HANDLE SA	TOP		No	
8	1004696-64	1	CAGE	LH		No	
9	1004694-52	1	CAGE	RH		No	
10	1004694-53	1	KIT	CORD WRAP		No	
11	1004694-54	1	PCB SA	CHARGER		No	
12	1004696-65	1	PCB SA	MAIN		No	QS
13	1004694-56	1	PCB SA	BACK UP BATTERY		No	
14	1004696-66	1	TRANSFORMER	EURO		No	QS
15	1004696-67	1	ANTENNA			No	
16	1004696-68	1	PCB SA	AUX		No	
17	1004694-61	1	HOUSING REAR			No	
18	1004694-62	1	BATTERY CONNECTOR			No	
19	1004696-69	1	COVER	AUX		No	
20	1004694-64	1	DOOR	BUTTON BATTERY		No	
21	1004694-65	1	CORDSET (EURO)	QS		No	QS
22	1004696-70	1	COVER	DISPLAY		No	
23	1004694-69	1	BRACKET SA	DISPLAY		No	
24	1004696-71	1	HOUSING SA	TECH BOX KIT		No	
51	5140112-26	1	BATTERY	CR2032		No	