

Select Standard Espag Handle
Select Compact Espag Handle

Diagram

Fig. 1


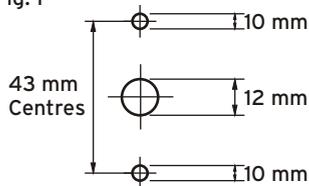


Fig. 2

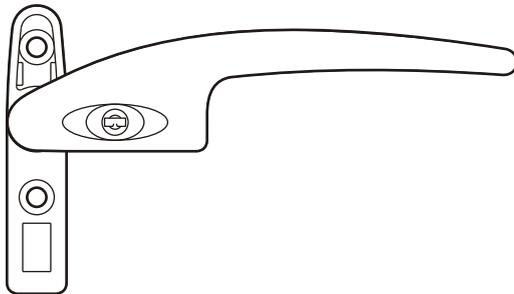

* Select Standard Espagnolette Handle Illustrated

Fixing Instructions

1. Machine holes for handle as shown in Fig. 1.
2. Attach handle to profile/window using screws as shown in Fig. 2. Ensure both handle and Espagnolette are in the 'open' position.
 - * Shrink wrap can remain on handle, remove excess from rear of handle for fixing *
3. Clip in screw cover.
4. Open and close handle (see overleaf) to check operation.
5. Attach handle key to window prior to transit.

NB It may be necessary to operate the handle a few times to bed it in and alleviate any initial stiffness in the operation

The recommended screws are M5 machine screws, Countersunk head.

- Adequate protection is advised when decorating to prevent paint or plaster etc. fouling the moving parts.
- Do not clean any part of these fittings with solvents or Abrasive substances.

MARKETING DIVISION

International House, Peartree Road, Stanway, Colchester, Essex CO3 0JL
Tel: +44 (0) 1206 713800 Fax: +44 (0) 1206 543126 Web: www.titon.com